



ELTEC INSTRUMENTS, INC.

## ELTECdata # 102

# Frequency Dependency in Pyroelectric Detectors Incorporating a Voltage Follower

### Electrical Time Constant

The effective electrical time constant of the circuit is:

$$\tau_e = RC$$

where

- $\tau_e$  = Electrical Time Constant [seconds]
- R = Resistance of the load resistor;
- C = Capacitance of the sensing crystal plus strays: usually 30 picofarads for single crystal and parallel dual detectors.

And the electrical breakpoint is:

$$\text{Electrical Breakpoint} = f_e = \frac{1}{2\pi\tau_e} \text{ [Hz]}$$

The time constant of an RC circuit is also useful dealing with a transient event. Viewing this as a step function, the rise time (defined as the time from a 10% to 90% of final-value) is about  $2.2\tau_e = 2.2$  (RC).

Although the response from maximum will decrease to 37% in 1 RC-time constant, for a second fast transient occurring within 1% of the  $\tau_e$ , the distortion due to 'leakage' will also be less than 1%. This shows that sometimes a long  $\tau_e$  can be advantageous.

Response beyond the effective bandwidth (electrical break) decreases as  $1/f$  (the sensitivity in the flat region times the reciprocal of the frequency of interest, i.e. at -20 dB per decade).

### Thermal Time Constant

When the sensing element is in thermal equilibrium, there is no output from the detector (a pyroelectric device responds only to a change). The time it takes for the detector to thermalize to a step input is called the Thermal Time Constant.

Viewed as a limiting factor, the thermal time constant has the reverse effect on frequency response of the electrical time constant. As temperatures change slowly, the detector is fighting the thermalization of the crystal to produce an output. Thus the thermalization time serves to limit frequency response until the thermal break is reached.

$$\text{Thermal Breakpoint} = f_t = \frac{1}{2\pi\tau_T} \text{ [Hz]}$$


where:

$\tau_T$  = **Thermal Time Constant**  
(usually 0.65 seconds for most loop mounted crystals and 0.032

seconds for most hard-mounted laser detectors)

Response below the thermal break decreases as  $f$ , i.e. at -20 dB per decade.

The overall frequency response of the detector is then the result of the thermal limiting factor ( $\tau_T$ ) and the electrical parameter ( $\tau_e$ ). This responsivity is essentially flat in the region between  $f_t$  and  $f_e$  ( $f_e > f_t$ ). If  $f_e < f_t$  (with large load resistors, R), then  $f_e$  establishes the low frequency limit and the breakpoints are merely exchanged (both electrical and thermal are symmetrical and independent).

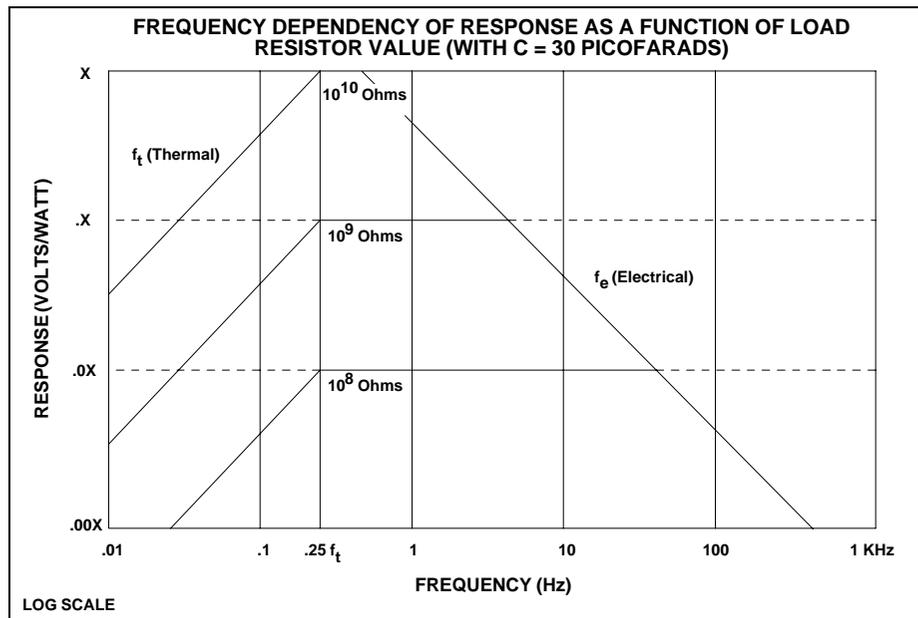

**NOTICE:** The information provided herein is believed to be reliable. However, ELTEC Instruments, Inc. assumes no responsibility for inaccuracies or omissions. ELTEC Instruments, Inc. assumes no responsibilities for the use of the information, and all use of such information shall be entirely at the User's own risk. Publication of this information does not imply any authority or license for its use nor for any infringement of patents or rights of others which may result from its use.

**Please note that neither the electrical or thermal time constant can be tightly controlled in production due to internal component tolerances and interactions.**



ELTEC Instruments, Inc. P.O. Box 9610 Daytona Beach, Florida 32120-9610 U.S.A.  
Tel (USA and Canada): (800) 874-7780 Tel (Outside USA): (386) 252-0411 Fax: (386) 258-3791  
Web: [www.eltecinstruments.com](http://www.eltecinstruments.com) E-Mail: [Sales@eltecinstruments.com](mailto:Sales@eltecinstruments.com)